

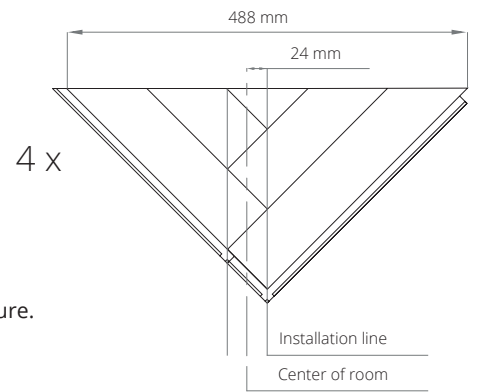



How to begin installation with Start Triangles

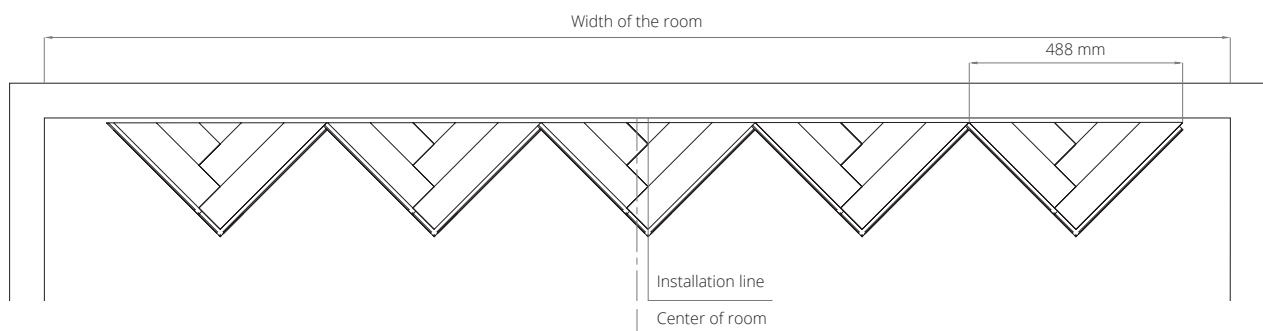


1. Measure the width of the room and make a line in the center of the room on the subfloor. Now make an installation line on the subfloor according to the left picture. After creating center line and installation line, start laying out the start triangles against the wall as the picture below shows.

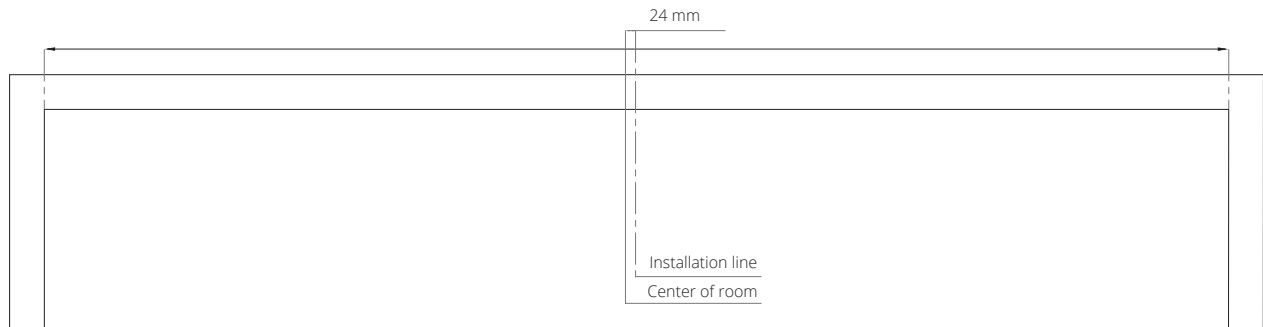


2. Add A-strips to lock the start triangles together.

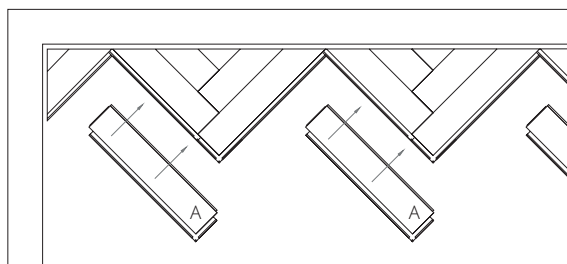

3. Add additional A- and B-strips to stabilize the floor.

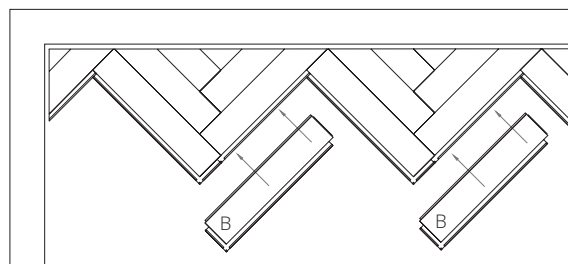

4. Pull the floor out from the wall and add spacers.

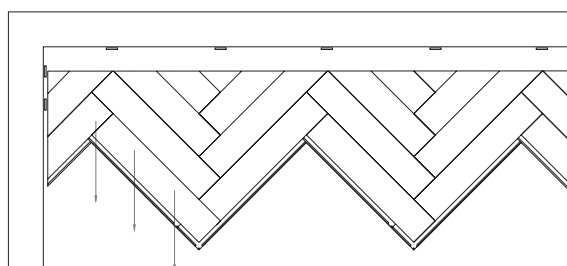

5. Slide the floor in place and continue assembly.

