
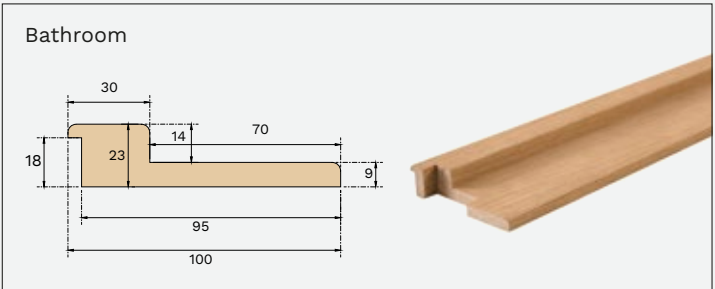
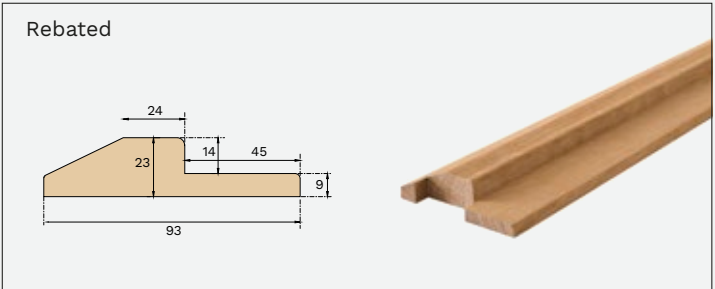


Bjelin Threshold

BJELIN

Bjelin offers three types of thresholds: Plain threshold, Rebated threshold and Bathroom threshold. Crafted from FSC®-certified solid oak to support responsible forestry, these thresholds effectively cover the gap between the floor and door frame.

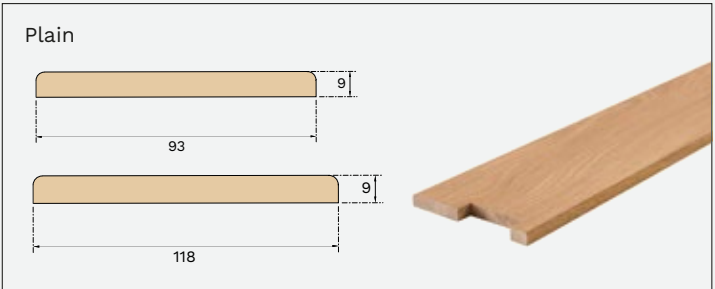

General properties	
Surface finish	Untreated / Lacquered
Name	Threshold
Wood type	Oak
Height (mm)	9-23
Length (mm)	830-930
Width (mm)	93-118

INSTALLATION

How to install a threshold:

1. Measure the opening

Measure the width of the doorway and, if needed, cut the threshold to the correct size.

2. Prepare the surface

Clean the floor and ensure it's flat.

3. Fit the threshold

Test the threshold in place and cut it if necessary for a perfect fit.

4. Attach the threshold

Use adhesive (such as construction glue) or screws to secure the threshold. If using screws, pre-drill the holes. Attach the threshold to the sub-floor, not the floor, to allow for movement.

5. Check the fit

Ensure the door opens and closes smoothly without hitting the threshold.

6. Finish up

Clean off any excess glue and let it dry according to the instructions.