
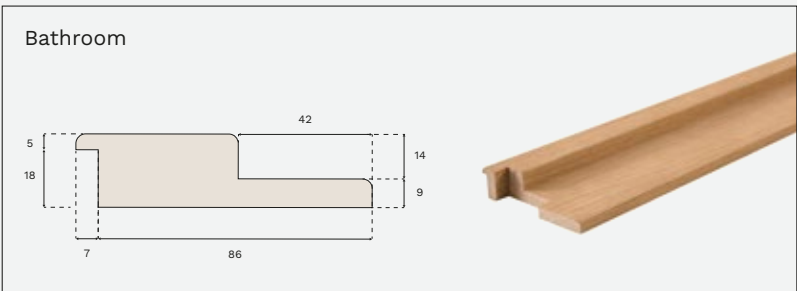
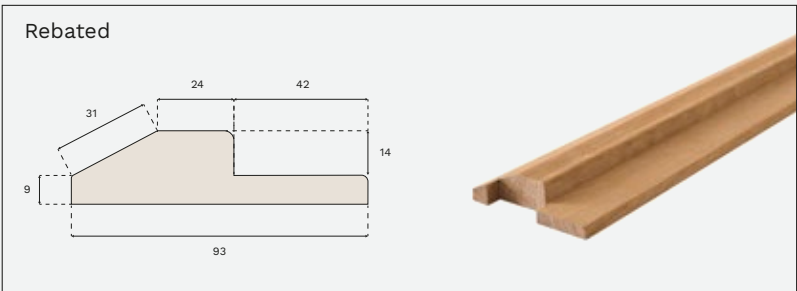


Bjelin Threshold

Solid oak

Bjelin offers three types of thresholds: Plain threshold, Rebated threshold and Bathroom threshold. Crafted from FSC®-certified solid oak to support responsible forestry, these thresholds effectively cover the gap between the floor and door frame.

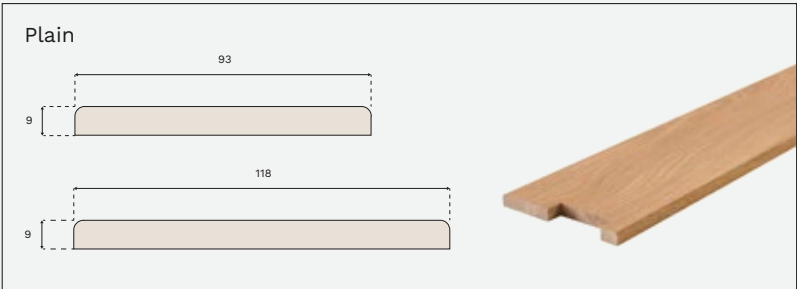

| General properties | |
|--------------------|-----------------------|
| Surface finish | Untreated / Lacquered |
| Name | Threshold |
| Wood type | Oak |
| Height (mm) | 9-23 |
| Length (mm) | 830-930 |
| Width (mm) | 93-118 |

INSTALLATION

How to install a threshold:

- 1. Measure the opening**
Measure the width of the doorway and, if needed, cut the threshold to the correct size.
- 2. Prepare the surface**
Clean the floor and ensure it's flat.
- 3. Fit the threshold**
Test the threshold in place and cut it if necessary for a perfect fit.

- 4. Attach the threshold**
Use adhesive (such as construction glue) or screws to secure the threshold. If using screws, pre-drill the holes. Attach the threshold to the sub-floor, not the floor, to allow for movement.
- 5. Check the fit**
Ensure the door opens and closes smoothly without hitting the threshold.
- 6. Finish up**
Clean off any excess glue and let it dry according to the instructions.